

## Depron Installation Guide

For use Under Engineered Wood, Laminate and Carpet  
62.5 x 80 cm Insulation Boards

**You must ensure the subfloor is clear of any debris and dust prior to starting.**

### For under Carpet

Apply the double sided tape to the underside of the depron on each edge, this is to be done on the boards that form the perimeter of the room to ensure it is stuck down and reduces movement when carpet is being stretched.

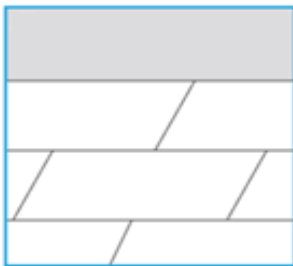


Image 1

Once the perimeter is secured with the double sided tape the rest of the Depron is designed to be loose laid onto the subfloor in a brickwork pattern. (Image 1)

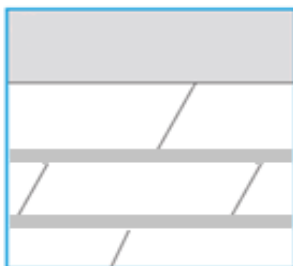


Image 2

When installing the Depron boards you will need to tape the joints of each board together to ensure less movement. The tape is best laid along the horizontal lines first (Image 2) to ensure stability by allowing less movement across the floor, the vertical lines should then be taped afterwards (Image 3) for enhanced stability.



Image 3

**Do not use spray adhesive with Depron.**